

# CONTROL PANEL DG-30

## STANDARD COMMANDS

**Driver Volume**  
Press the first time: the display blinks and shows the pre-set volume, the other press changes the volume.

**Left display**  
When buttons are not pressed the display shows:  
≡ for Stage mode,  
⌂ for Road mode

**Right display**  
When buttons are not pressed the display shows the setting of cancellation mode (0..3).

**Co-Driver Volume**  
Press the first time: the display blinks and shows the pre-set volume, the other press changes the volume.



**To change the timbre of the co-driver voice (Normal, Hight, Low)**  
Press the first time: the left display shows 'E' and the right display shows the pre-set EQ mode: H = high, 0 = normal, L = low.  
The second press changes the EQ mode (0, H, L).  
The EQ settings control the Co-Driver voice only.

**Stage/Road**  
A short press changes between Stage and Road mode.

	Stage	Road (2)
Intercom	Active	Active
Videocamera OUT	Active	Active
Radio	NO	Active
Phone	NO	Active

**Digital active noise cancellation mode**  
Press the first time: the left display shows 'd', and the right display shows the pre-set noise cancellation mode.  
0 = digital cancellation off.  
1 = digital cancellation minimum  
2 = digital cancellation medium  
3 = digital cancellation maximum  
  
The second press changes the noise cancellation mode (0..3).

## MAIN & SPARE MODE



**Spare Intercom**  
The spare intercom is a fully analog intercom to be used only in emergency situations (all digital circuits are excluded):  
The volumes are fixed, radio and phone connections are off.



# CONTROL PANEL DG-30

## TELEPHONE

### Telephone call control

Press the green for 2 seconds to start a phone call, press the red for 2 seconds to close it.

### To adjust the telephone volume.

Green short press: the right display blinks and shows the pre-set volume. Press Co-driver + and - to adjust the phone volume also during a call. This operation doesn't effect the intercom volumes.



### Telephone numbers setting

Press the first time: the right display shows the pre-set number: 1..4. The Second press changes the numbers.

### How to save a telephone number

The 4 numbers have to be pre-saved in the SIM card using a standard phone with the following convention: Saved contact name must be the number of the preset phone number (Contact name = 1..4).

### IMPORTANT NOTE:

DISABLE PIN CODE INSERTING THE SIM IN A PHONE.

## ADVANCED COMMANDS

### Camera/Radio/Telephone out gain

Press '+' for about 3 seconds in order to activate "Camera/Radio/Telephone out gain setting", then shortly press driver "+" or "-" for adjust the gain.

### Left display

'r' = Road mode selection  
'C' = Camera/Radio/Telephone out gain setting  
't' = Telephone volume setting  
'I' = Input audio gain

### Right display

When you enter in any configuration mode, it blinks showing the value to set.



### Input audio gain

Press '+' for about 3 seconds in order to activate the "Input Audio Gain Setting", then shortly press Co-driver '+' or '-' to adjust the gain.

### Road Mode Selection

Push down it about 2 seconds in order to activate "Road mode selection", then shortly press it for switch between:

- "Road Mode 1" = Driver doesn't receive radio and phone communications, co-driver does.
- "Road Mode 2" = Both Driver and co-driver receive radio and phone communications.

